

GOURMET

QUICK SLICER/GRATER 2000

Attachments

Storage Lid



Multi-Functional Base



Slicing Attachment



Julienne



Coarse Grater



Fine Grater



Citrus Juicer



Large Citrus Juicer



Safety Holder



The Gourmet Quick Slicer/Grater 2000 is a uniquely designed manual food slicer and grater which makes electric food slicers and graters stand in its shadow. The Gourmet Quick Slicer/Grater 2000 has the amazing convenience of 6 different attachments to make cooking easier for everyone. This product does not require electricity which makes it safer to use compared to its electrical counterparts. The unit's compact design makes it easy to wash and store. This product is an ideal kitchen tool for any household.

USES FOR EACH ACCESSORY

Slicing Platform – Ideal for uniformly slicing potatoes, onions, cucumbers, zucchini, carrots, apples, celery and a variety of fresh fruits and vegetables.

Julienne Cutter – Great for Julienne french fries, carrot sticks and meat or cheese sticks.

Coarse Grater – Works well with potatoes or hash brown potatoes, hard and soft cheeses, carrots and a variety of solid vegetables.

Fine Grater – Ideal for hard cheese, baker's chocolate, nutmeg and cinnamon.

Citrus Juicer – Great for small oranges, lemons, and limes.

Large Citrus Juicer – For large oranges and grapefruits.

**Distributed Exclusively
Worldwide By:**

**US Jesco
International Ltd., Inc.
1421 Westway Circle
Carrollton, Texas 75006-3733 USA
800-425-3726
800-492-5888 (Fax)
www.usjesco.com**



CAUTION

1. The first time you use this grater/slicer, please clean it with a sponge or nylon brush together with a little detergent for cleaning the blades, bowl and surfaces of the top cabinet.
2. When the blades are being cleaned do not touch the sharp blades, and the blades should be kept in a safe place out of reach of the children.
3. The ingredients should never overfill the bowl.
4. Do not turn the arm constant in a clockwise direction or turn it at a very high rate of speed. The turning speed should be from slow to fast.
5. Do not put the unit into a microwave oven to heat or cook food.
6. The water temperature for cleaning the grater/slicer should not exceed 80°C, and detergent suitable for foodstuffs should be used.